



EZ Slide

Blade Changer for Richwood Belt Cleaners



When you need a hand with blade change out, count on the ease of use of the EZ Slide blade changer.

EZ Slide carries the weight of the blade and slides it into position. There are six easy steps:

1. Insert EZ slide into the opening in the chute wall or between the cleaner frame.
2. Slide the blade cradle to opposite ends of the slide tube assembly.
3. Release cleaner tension and remove blade per standard method.
4. Lay blade in cradle.
5. Slide blade and cradles toward you until the blade can be removed from near side cradle. Lift the blade from the cradle and continue pulling it toward you with the far end resting on the other cradle until the blade is out of the chute.
6. To install a new blade, simply reverse the process.

- *facilitate blade change*
- *heavy duty design*
- *easy to use*

(800) 237-6951

f: (304) 525-8018



richwood.com

e: info@richwood.com