


# Material Containment Solutions

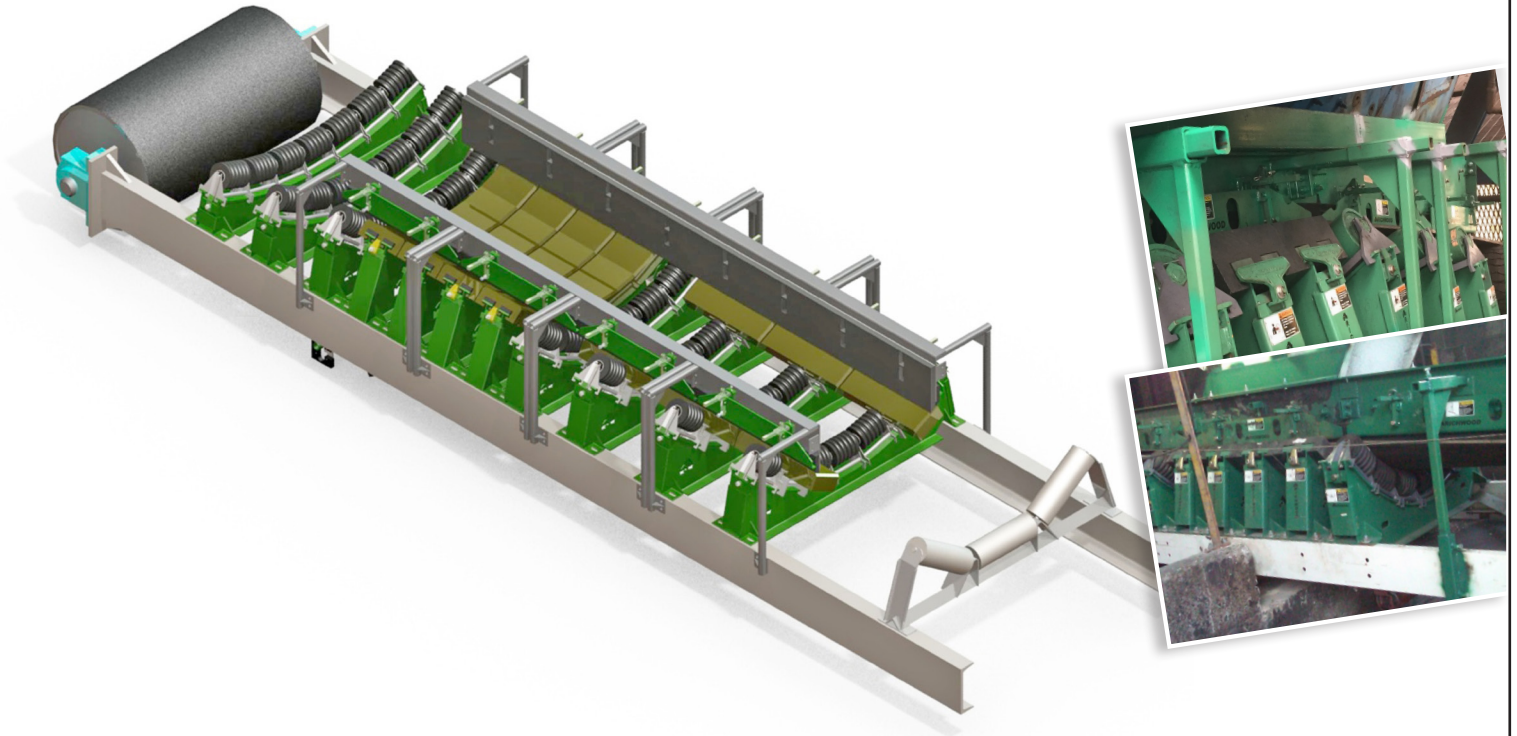

## Contain Dust and Fines

Contain dust and fines in busy load zones with Richwood's engineered load zone solutions.

A trouble free load zone begins with Impact Saddles® and Cushion Arc® Impact Idlers for correct belt elevation and consistent support. Impact Saddles® protect the belt by taking the force of impact and preventing material from embedding in the belt cover.

Next, the load zone requires good structural support and Richwood Skirt Clamps on the outside to secure the skirt rubber. Skirting rubber seals in fines and dust particles.

Lastly, and very importantly, Richwood Canoe Liners® contain bulk material flow while providing excellent wear resistance. Richwood Canoe Liners® use specially formulated rubber with optional ceramic matrix for maximum abrasion protection.

Together, these engineered components keep busy load zones well equipped to handle the demands of increased production.

Made in USA. Rely on Richwood!

**(800) 237-6951**

f: (304) 525-8018



**RICHWOOD**

*Proven Solutions. Expert Advice.*

**richwood.com**

e: [info@richwood.com](mailto:info@richwood.com)

©Richwood 2016